


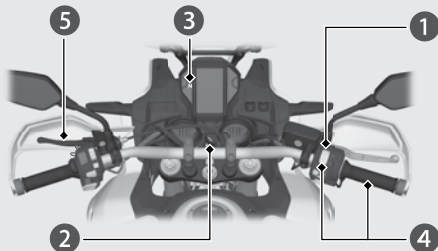


**CRF1000D/D II**

Start your engine using the following procedure, regardless of whether the engine is cold or warm.

**NOTICE**

- If the engine does not start within 5 seconds, turn the ignition switch to the OFF position and wait 10 seconds before trying to start the engine again to recover battery voltage.
- Extended fast idling and revving the engine can damage the engine, and the exhaust system.
- Snapping the throttle or fast idling for more than about 5 minutes may cause exhaust pipe discoloration.

- ① Make sure the engine stop switch is in the  (Run) position.
- ② Turn the ignition switch to the ON position.
- ③ Check the transmission in Neutral (**N** indicator to come on).
- ④ Press the **START**  button with the throttle completely closed.
- ⑤ Make sure the parking brake lever is released before riding. 

### **| If Engine Does Not Start When you stop the engine**

- ① To stop the engine, shift the transmission to Neutral (**N** indicator to come on).
  - ▶ If you turn the ignition switch to the OFF position when the motorcycle is in gear, the engine will shut off with the clutch disengaged.
- ② Turn the ignition switch to the OFF position.
- ③ Set the parking brake when you park the motorcycle. 