

## Handle Grip Heater (Continued)

### To turn off handle grip heater

- 1 Select the handle grip heater display pop-up information using the **[Fn]** function sel switch.
- 2 Pull backward the **[Fn]** function lever several times to select the handle grip heater off.

Do not use the handle grip heater with the engine at idle for a long time. It may result in a low (or dead) battery.

Maintains the selected level when the ignition switch is turned to the OFF position.

- u The heater level is not changed if the ignition switch is turned to the OFF position within 5 seconds after heater level changed.

