

Maintenance

Please read "Importance of Maintenance" and "Maintenance Fundamentals" carefully before attempting any maintenance. Refer to "Specifications" for service data.

Importance of Maintenance	P. 225	Coolant	P. 266
Maintenance Schedule	P. 227	Brakes	P. 268
Maintenance Record	P. 230	Side Stand	P. 272
Maintenance Fundamentals	P. 231	Drive Chain	P. 273
Tool	P. 247	Wheels	P. 277
Removing & Installing Body		Clutch	P. 279
Components	P. 248	Throttle	P. 282
Battery	P. 248	Crankcase Breather	P. 283
Battery Box Cover	P. 249	Other Adjustments	P. 284
Clip	P. 250	Adjusting the Headlight Aim	P. 284
Front Seat	P. 251	Adjusting the Brake Lever	P. 285
Rear Seat	P. 253	Adjusting the Front Suspension	P. 286
Skid Plate	P. 255	Adjusting the Rear Suspension	P. 290
Tool Box	P. 257	Adjusting the Windscreen Height	P. 296
Spark Arrester	P. 258		
Engine Oil	P. 260		