

Operating Controls

Start Button



The start button is used for starting the engine. Pushing the button in starts the engine. See *Starting Procedure*, [page 32](#).

When the start button is pushed, the starter motor will crank the engine.

Engine Stop Switch



The engine stop switch is used to turn the engine off during normal riding situations. To operate, turn the switch to the OFF (⊗) position. The switch must be in the RUN (○) position to start the engine.

Front Brake Lever

The front brake lever is used to slow or stop your motorcycle. To operate, pull the lever. For information on braking techniques, see [page 38](#).

Throttle

The throttle controls engine rpm (speed). To increase engine rpm, rotate the grip toward you. To reduce engine rpm, rotate the grip away from you. The throttle will automatically return to the closed position (engine idle) when you remove your hand.

For throttle limiter activation and deactivation instructions, see [page 75](#).