

# Maintenance Schedule

Items	Frequency	Which-ever Comes First ⇒	Initial Maint.	Regular Maint. Interval					Refer to page:
			mi	100	600	1,200	1,800	2,400	
			km	150	1,000	2,000	3,000	4,000	
Note	Month	1	6	12	18	24			
	Drive Chain	Note 1	I, L	I, L: every 300 mi (500 km) or 3 month					106
	Drive Chain Slider			I	I	I	I	107	
	Brake Shoes Wear			I	I	I	I	94	
	Brake System		I	I	I	I	I	90	
	Clutch System		I	I	I	I	I	76	
	Side Stand				I		I	105	
*	Suspension				I		I	87	
*	Spark Arrester			C: every 1,000 mi (1,600 km) or every 100 operating hours					84
*	Nuts, Bolts, Fasteners		I		I		I	–	
**	Wheels/Tires		I	I	I	I	I	96, 101	
**	Steering Head Bearings		I		I		I	–	

\* Should be serviced by your dealer, unless the owner has the proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 160).

\*\* In the interest of safety, we recommend these items be serviced only by your dealer.