

Operating Controls


The reserve fuel supply is:
0.26 US gal (1.0 ℓ)

The tank should be refilled as soon as possible after switching to reserve, and the fuel valve should be returned to the ON position after refueling to avoid running out of fuel with no reserve.

Choke Knob



LEFT SIDE

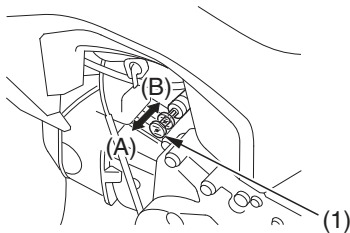

(1) choke knob

(A) fully ON
(B) fully OFF

The choke knob (1) is used for starting the engine ([page 32](#)). The choke increases the percentage of fuel in the fuel/air mixture delivered to the engine.

ON

Used to start a cold engine with air temperature below 35°C (95°F).

OFF

Used for normal operation, for restarting a warm engine, or starting a cold engine with air temperature above 35°C (95°F).