

Servicing Your Honda

Service Preparations

Maintenance Component Locations	52
Tools	55
Left Side Cover Removal	56
Left Fuel Tank Shroud Removal	57
Right Fuel Tank Shroud Removal	58
Clip Removal	59

Service Procedures

Fluids & Filters

Fuel	60
Engine Oil	63
Air Cleaner	69
Crankcase Breather	72

Engine

Throttle	73
Clutch System	76
Valve Clearance	78
Engine Idle Speed	81
Spark Plug	82
Spark Arrester	84

Chassis

Suspension	87
Brakes	90
Wheels	96
Tires & Tubes	101
Side Stand	105
Drive Chain	106

Electrical

Battery	113
Appearance Care	118