


Left Fuel Tank Shroud Removal

Refer to *Safety Precautions* on page 43.

LEFT SIDE

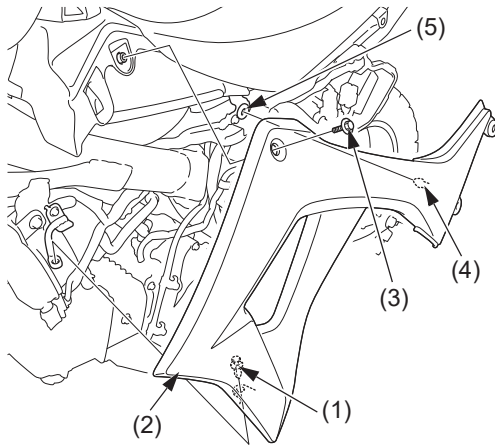

- (1) clip
- (2) left fuel tank shroud
- (3) bolt

- (4) prong
- (5) grommet

Removal

1. Remove the left side cover (page 54).
2. Remove the clip (1) (page 57).
3. Remove the left fuel tank shroud (2) by removing the bolt (3) and pulling the prong (4) from the grommet (5).

Installation

Installation is in the reverse order of removal.