



# Air Cleaner

## Cleaning

LEFT SIDE

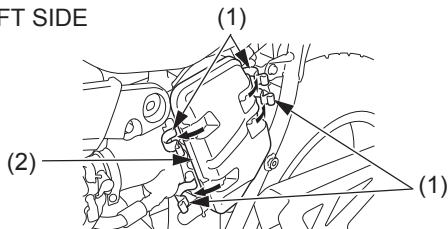

- (1) retainer clips
- (2) air cleaner housing cover

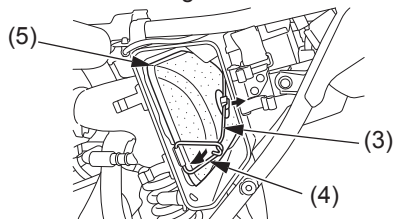

- (3) set spring
- (4) set spring holder
- (5) air cleaner

1. Remove the left side cover ([page 57](#)).
2. Unlatch the retainer clips (1) and remove the air cleaner housing cover (2).
3. Unhook the set spring (3), take care to avoid bending the set spring and set spring holder (4).
4. Remove the air cleaner (5).