

# Servicing Your Honda

---

## *Service Preparations*

|                                       |    |
|---------------------------------------|----|
| Maintenance Component Locations ..... | 52 |
| Tools .....                           | 55 |
| Seat Removal.....                     | 56 |
| Left Side Cover Removal .....         | 57 |

## *Service Procedures*

### Fluids & Filters

|                         |    |
|-------------------------|----|
| Fuel .....              | 58 |
| Engine Oil.....         | 61 |
| Air Cleaner .....       | 67 |
| Crankcase Breather..... | 71 |

### Engine

|                      |    |
|----------------------|----|
| Throttle .....       | 72 |
| Clutch System .....  | 74 |
| Spark Plug .....     | 77 |
| Spark Arrester ..... | 79 |

### Chassis

|                    |     |
|--------------------|-----|
| Suspension .....   | 81  |
| Brakes.....        | 84  |
| Wheels.....        | 92  |
| Tires & Tubes..... | 98  |
| Side Stand .....   | 102 |
| Drive Chain .....  | 103 |

### Electrical

|               |     |
|---------------|-----|
| Battery ..... | 110 |
|---------------|-----|

|                       |     |
|-----------------------|-----|
| Appearance Care ..... | 115 |
|-----------------------|-----|