

Servicing Your Honda

Service Preparations

Maintenance Component Locations	52
Tools	55
Seat Removal.....	56
Left Side Cover Removal	57

Service Procedures

Fluids & Filters

Fuel	58
Engine Oil.....	61
Air Cleaner	67
Crankcase Breather.....	71

Engine

Throttle	72
Clutch System	74
Spark Plug	77
Spark Arrester	79

Chassis

Suspension	81
Brakes.....	84
Wheels.....	92
Tires & Tubes.....	98
Side Stand	102
Drive Chain	103

Electrical

Battery	110
---------------	-----

Appearance Care	115
-----------------------	-----