


# Seat Removal

---

Refer to *Safety Precautions* on page 45.

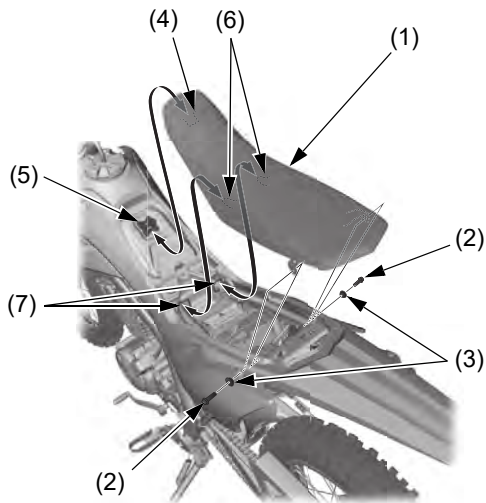

- |             |                  |
|-------------|------------------|
| (1) seat    | (4) front recess |
| (2) bolts   | (5) front prong  |
| (3) collars | (6) rear prong   |
|             | (7) rear recess  |

The seat (1) must be removed to service the battery and main fuse.

## Removal

1. Remove the bolts (2) and collars (3).
2. Remove the seat backward.

## Installation

1. Insert the front recess (4) into the front prong (5) and the rear prong (6) into the rear recess (7).
2. Install the collars onto the bolts. Tighten the bolts securely.