


# Clutch System

Refer to *Safety Precautions* on [page 43](#).

## Clutch Freeplay

LEFT SIDE

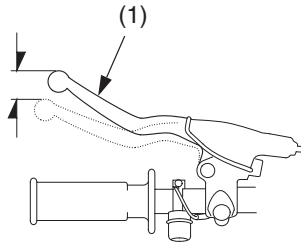

(1) clutch lever

### Inspection

Check freeplay.

Freeplay: 3/8–13/16 in (10–20 mm)


If necessary, adjust to the specified range. Improper freeplay adjustment can cause premature clutch wear.

### Upper Adjustment

Minor adjustments are generally made with the upper clutch cable adjuster.

*Upper clutch assembly adjuster:*

LEFT SIDE

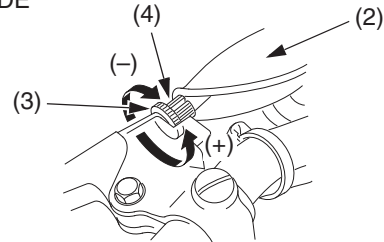

(2) rubber dust cover  
(3) upper lock nut  
(4) upper clutch cable adjuster  
(+) increase freeplay  
(-) decrease freeplay

1. Pull the rubber dust cover (2) back.
2. Loosen the upper lock nut (3).
3. Turn the upper clutch cable adjuster (4) to obtain the specified freeplay.

(cont'd)