

Servicing Your Honda

Service Preparations

Maintenance Component Locations	53
Tools	56
Side Cover Removal.....	57

Service Procedures

Fluids & Filters

Fuel	59
Engine Oil.....	62
Air Cleaner	68
Crankcase Breather.....	72

Engine

Throttle.....	73
Clutch System	75
Engine Idle Speed	78
Spark Plug	79
Spark Arrester	81

Chassis

Suspension	83
Brakes.....	86
Wheels.....	94
Tires & Tubes.....	100
Side Stand	104
Drive Chain	105

Electrical

Battery	112
---------------	-----

Appearance Care	117
-----------------------	-----