

Maintenance Schedule

Items	Frequency	Whichever Comes First ⇒	Initial Maint.	Regular Maint. Interval				Refer to page:
				mi	100	600	1,200	
		Note	Month	1	6	12	18	
	Drive Chain	Note 1	I, L	I, L: every 300 mi (500 km) or 3 months				105
	Drive Chain Slider			I	I	I	I	106
	Brake Fluid	Note 2		I	I	I	I	87
	Brake Shoes/Pads Wear			I	I	I	I	89, 92
	Brake System		I	I	I	I	I	86
	Clutch System		I	I	I	I	I	75
	Side Stand				I		I	104
*	Suspension				I		I	83
*	Spark Arrester		C: every 1,000 mi (1,600 km) or every 100 operating hours					81
*	Nuts, Bolts, Fasteners		I		I		I	–
**	Wheels/Tires		I	I	I	I	I	94, 100
**	Steering Head Bearings		I		I		I	–

* Should be serviced by your dealer, unless the owner has the proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 162).

** In the interest of safety, we recommend these items be serviced only by your dealer.