


# Battery

The battery is located in the battery compartment behind the left side cover.

## Removal

1. Make sure the ignition switch is OFF.
2. Remove the left side cover (page 53).

LEFT SIDE

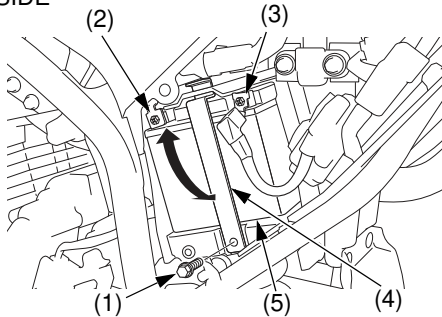

- (1) battery holder bolt
- (2) negative (-) terminal
- (3) positive (+) terminal
- (4) battery holder
- (5) battery

3. Remove the battery holder bolt (1).
4. Disconnect the negative (-) terminal (2) from the battery.
5. Disconnect the positive (+) terminal (3) from the battery.
6. Raise the battery holder (4), then remove the battery (5) taking care not to drop the terminal nuts.

(cont'd)