

Starting & Stopping the Engine

Always follow the proper starting procedure described below.

Your motorcycle can be started with the transmission in gear by pulling in the clutch lever before operating the starter.

Preparation

Before starting, insert the key and turn the ignition switch to ● (ON), and confirm the following:

- The transmission is in neutral.
- The PGM-FI malfunction indicator lamp (MIL) is off.

Starting Procedure

This motorcycle has a fuel-injected engine. Follow the procedure indicated below.

Any Air Temperature

1. With the throttle completely closed, press the start button.
2. If you cannot start the engine, open the throttle slightly (about 0.1 in (3 mm), without freeplay).

