

Maintenance Schedule

Items	Frequency	Whichever Comes First	Initial Maint.	Regular Maint. Interval				Refer to page:	
				⇒	mi	km	1,000		1,200
		Note	Month	1	6	12	18		24
			Drive Chain	Note 1		I, L	I, L: every 300 mi (500 km) or 3 months		
	Drive Chain Slider				I	I	I	I	99
	Brake Fluid	Note 2			I	I	I	I	83
	Brake Pads Wear				I	I	I	I	85
	Brake System			I	I	I	I	I	82
	Clutch System			I	I	I	I	I	72
	Side Stand					I		I	97
*	Suspension					I		I	79
*	Spark Arrester			C: every 1,000 mi (1,600 km) or every 100 operating hours				77	
*	Nuts, Bolts, Fasteners			I		I		I	–
**	Wheels/Tires			I	I	I	I	I	87, 93
**	Steering Head Bearings			I		I		I	–

* Should be serviced by your dealer, unless the owner has the proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 158).

** In the interest of safety, we recommend these items be serviced only by your dealer.