


# Clutch System

Refer to *Safety Precautions* on page 39.

## Clutch Freeplay

LEFT SIDE

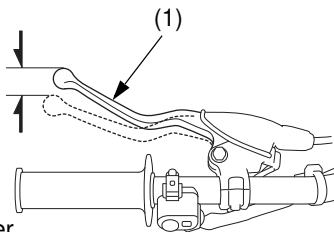

(1) clutch lever

### Inspection

Check freeplay.

Freeplay: 3/8 – 13/16 in (10 – 20 mm)

If necessary, adjust to the specified range.


Improper freeplay adjustment can cause premature clutch wear.

### Upper Adjustment

Minor adjustments are generally made with the upper clutch cable adjuster.

*Upper clutch assembly adjuster:*

LEFT SIDE

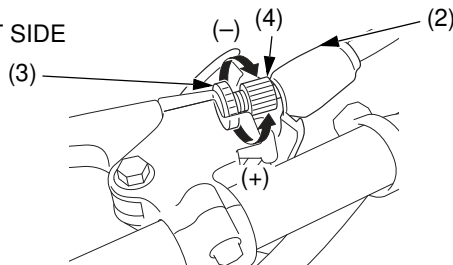

(2) rubber dust cover (+) increase freeplay  
(3) upper lock nut (-) decrease freeplay  
(4) upper clutch cable adjuster

1. Pull the rubber dust cover (2) off.
2. Loosen the upper lock nut (3).
3. Turn the upper clutch cable adjuster (4) to obtain the specified freeplay.