

# Clutch System


4. Tighten the lock nut and check the freeplay again.
5. Return the dust cover to its normal position.

## Lower Adjustment

The lower clutch cable adjuster is used if the upper clutch cable adjuster is threaded out near its limit, or the correct freeplay cannot be obtained.

1. Loosen the upper lock nut (3) and turn the upper clutch cable adjuster (4) all the way in (to provide maximum freeplay).
2. Tighten the upper lock nut and pull the rubber dust cover (2) back to its normal position.
3. Pull the cable boot (5) off the clutch cable lower adjuster (6).
4. Hold the lower clutch cable adjuster and loosen the lock nut (7).

RIGHT SIDE

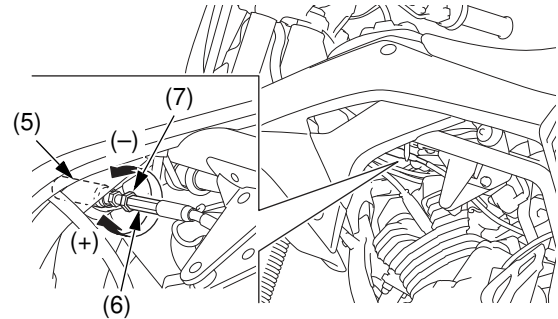

- (5) cable boot  
(6) lower adjuster  
(7) lock nut

- (+) increase freeplay  
(-) decrease freeplay

5. Turn the clutch cable lower adjuster to obtain the specified freeplay. Hold the lower clutch cable adjuster and tighten the lock nut. Return the cable boot to its normal position. Check the clutch lever freeplay.

(cont'd)