


# Spark Arrester

---

3. Use a brush to remove carbon deposits from the spark arrester screen (6). Be careful to avoid damaging the spark arrester screen. The spark arrester must be free of breaks and holes. Replace, if necessary.

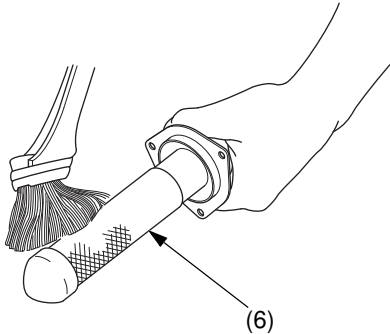

(6) spark arrester screen

4. Install the new gasket, the spark arrester and tail cover, and tighten the bolts to the specified torque:  
**9 lbf·ft (12 N·m, 1.2 kgf·m)**