


1. Pull the rubber dust cover (1) back.
2. Loosen the lock nut (2).
3. To position the front brake lever (3) farther away from the handgrip, turn the adjuster (4) clockwise.
To position the front brake lever closer to the handgrip, turn the adjuster counterclockwise.
4. Tighten the lock nut. Return the dust cover to its normal position.
5. Apply the brake, release it, then spin the wheel and check that it rotates freely. Repeat this procedure several times.

Fluid Level Inspection

Front Brake Fluid Level

RIGHT
HANDLEBAR

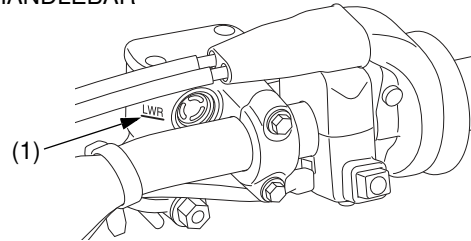

(1) LWR mark

With the motorcycle in an upright position, check the fluid level.

It should be above the LWR mark (1). If the level is at or below the LWR mark, check the brake pads for wear (page 85).