


Battery

The battery is located in the battery compartment behind the left side cover.

Removal

1. Make sure the ignition switch is OFF.
2. Remove the left side cover (page 53).

LEFT SIDE

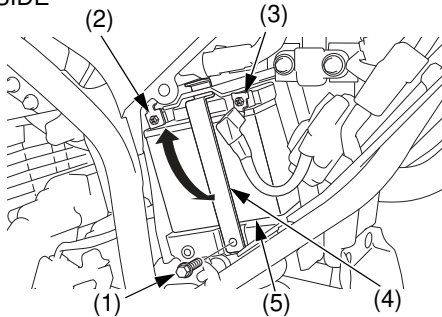

- (1) battery holder bolt
- (2) negative (-) terminal
- (3) positive (+) terminal
- (4) battery holder
- (5) battery

3. Remove the battery holder bolt (1).
4. Disconnect the negative (-) terminal (2) from the battery.
5. Disconnect the positive (+) terminal (3) from the battery.
6. Raise the battery holder (4), then remove the battery (5) taking care not to drop the terminal nuts.

(cont'd)