

# Maintenance

Please read “Importance of Maintenance” and “Maintenance Fundamentals” carefully before attempting any maintenance. Refer to “Specifications” for service data.

<b>Importance of Maintenance</b> .....	P. 36	<b>Side Stand</b> .....	P. 64
<b>Maintenance Schedule</b> .....	P. 37	<b>Drive Chain</b> .....	P. 65
<b>Maintenance Fundamentals</b> .....	P. 40	<b>Wheels</b> .....	P. 70
<b>Tool kit</b> .....	P. 52	<b>Clutch</b> .....	P. 71
<b>Removing &amp; Installing Body Components</b> ....	P. 53	<b>Throttle</b> .....	P. 74
Seat .....	P. 53	<b>Crankcase Breather</b> .....	P. 75
Left Side Cover .....	P. 54	<b>Other Adjustments</b> .....	P. 76
Battery .....	P. 55	Headlight Aim .....	P. 76
<b>Engine Oil</b> .....	P. 56	Brake Light Switch.....	P. 76
<b>Coolant</b> .....	P. 60		
<b>Brakes</b> .....	P. 62		