

Troubleshooting

Engine Will Not Start	P. 78	Tyre Puncture	P. 82
Overheating (High coolant temperature indicator is on)	P. 79	Electrical Trouble	P. 88
Warning Indicators On	P. 80	Battery Goes Dead	P. 88
PGM-FI (Programmed Fuel Injection)		Burned-out Light Bulb	P. 88
Malfunction Indicator Lamp (MIL).....	P. 80	Blown Fuse.....	P. 93
Other Warning Indication	P. 81		
Fuel Gauge Failure Indication	P. 81		