



- Remove the air cleaner element (3) from the air cleaner holder (4) by releasing the holder tab (5) from the hole (6) of the air cleaner element.

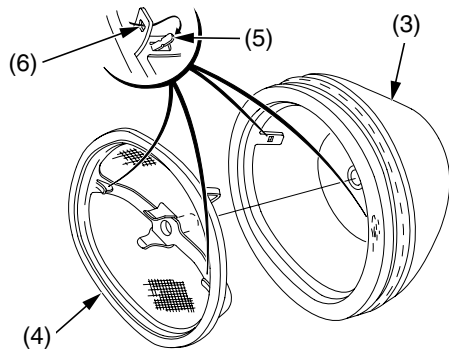


- (3) air cleaner element      (5) holder tab  
(4) air cleaner holder      (6) hole

- Wash the air cleaner in clean non-flammable cleaning solvent. Then wash in hot, soapy water, rinse well, and allow to dry thoroughly. The air cleaner element is made in two pieces: inner and outer, which cannot be separated.
- Clean the inside of the air cleaner housing.
- Allow the air cleaner to dry thoroughly. After drying, apply 1.7 oz (50 cm<sup>3</sup>) of clean Pro Honda Foam Filter Oil or an equivalent air cleaner oil from the inside of the element. Place the element into a plastic bag (7) and spread the oil evenly by hand.

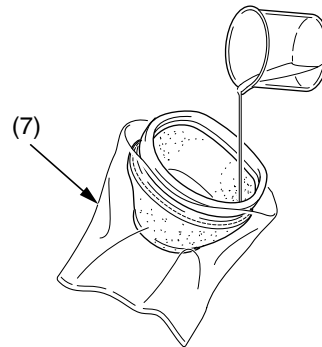


- (7) plastic bag

- Assemble the air cleaner element and holder. Install the holder tab (5) in the hole (6) of the air cleaner element.
- Apply 0.1 – 0.2 oz (3 – 5 g) of Pro Honda White Lithium Grease or equivalent to the air cleaner housing contact area of the air cleaner element.
- Install the air cleaner assembly (2) into the air cleaner housing by aligning its tabs (8) with the stay (9) of the air cleaner housing.
- Carefully position the sealing flange of the element to prevent dirt intrusion.

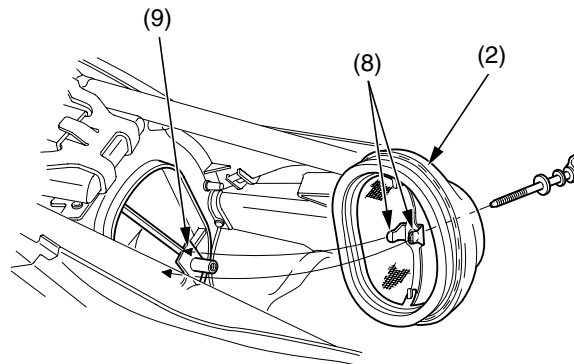

- (2) air cleaner assembly  
(8) air cleaner assembly tabs  
(9) air cleaner housing stay

- Install and tighten the air cleaner retaining bolt (1) securely.

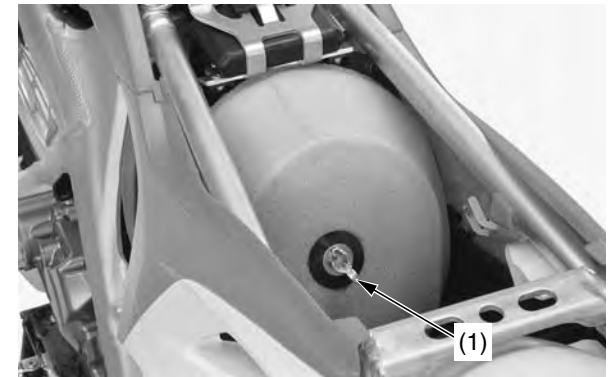

- (1) air cleaner retaining bolt

## NOTICE

*Improper installation of the air cleaner assembly may allow dirt and dust to enter the engine and cause rapid wear of the piston rings and cylinder.*

- Install the seat ([page 33](#))