


# Exhaust Pipe/Muffler


8. Install the right side cover (12) and bolt (13).
9. Install the seat mounting bolt (14) and tighten it to the specified torque:  
19 lbf·ft (26 N·m, 2.7 kgf·m)  
Tighten the bolt (12) to the specified torque:  
7 lbf·ft (10 N·m, 1.0 kgf·m)

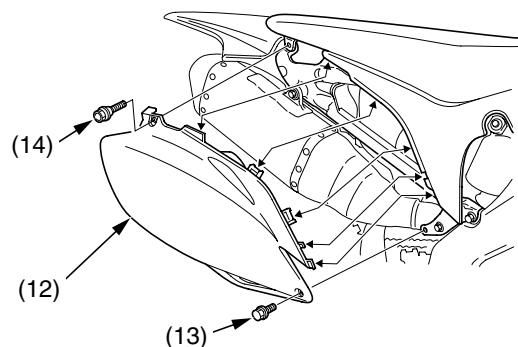

(12) right side cover  
(13) bolt  
(14) seat mounting bolt

## Exhaust Pipe Removal


1. Remove the muffler ([page 100](#)).
2. Remove the exhaust pipe joint nuts (1), exhaust pipe (2) and gasket (3).

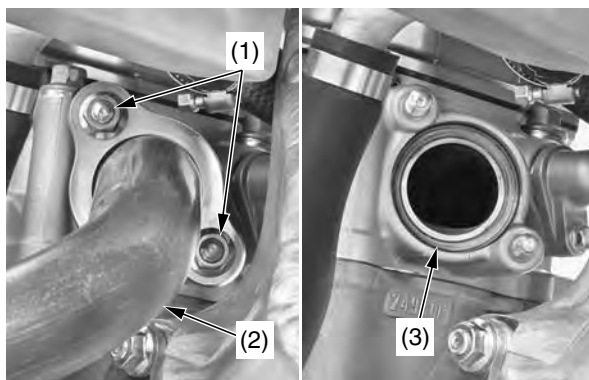

(1) exhaust pipe joint nuts  
(2) exhaust pipe  
(3) gasket

## Exhaust Pipe Installation

1. Install a new exhaust pipe gasket (1) as shown.
2. Install the exhaust pipe (2) and exhaust pipe joint nuts (3).

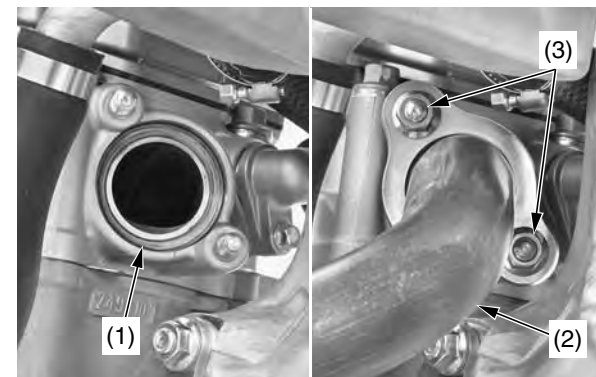

(1) exhaust pipe gasket (new)  
(2) exhaust pipe  
(3) exhaust pipe joint nuts

3. Install the muffler ([page 101](#)) but do not tighten the bolts yet.
4. Tighten the exhaust pipe joint nuts to the specified torque:  
15 lbf·ft (21 N·m, 2.1 kgf·m)
5. Tighten the muffler clamp bolt, muffler mounting A bolt and B bolt ([page 101](#)).
6. Install the removed parts in the reverse order of removal.