

G

gap, spark plug 66
 gasohol..... 155
 gasoline..... 39
 gearing 139
 guidelines,
 steering damper 137
 suspension adjustment..... 132

H

handlebar inspection..... 107
 Honda,
 contacting 163
 Rider’s Club 165
 service manual..... 162
 your dealer..... 164

I

identification, vehicle 150
 idle knob, fast 17, 60
 idle speed, engine 60
 indicator,
 circuit inspection 8
 DTC index..... 9
 MIL blink 7
 inspection, pre-ride..... 13
 instruments 5

L

labels, safety 4
 logbook, competition..... 156

M

maintenance,
 after competition31
 before & after competition.....30
 between motos & practice.....30
 component locations32
 general competition.....26
 importance.....22
 safety.....23
 schedule.....24
 manual, service.....162
 modifications.....3

O

oil,
 engine.....48
 fork.....88
 transmission51
 operating instructions.....15
 operation component locations6
 optional,
 parts list.....158
 sprockets139
 oxygenated fuels155

P

pads, brake93
 parts, optional.....158
 personal fit adjustments141
 ping, engine.....39
 plug, spark.....66
 pre-load, rear suspension.....127
 pre-ride inspection.....13
 protective apparel.....2

R

rear suspension maintenance127
 Rider’s Club Honda (USA only)165
 riding,
 apparel2
 basic operation.....15
 before.....11
 important safety information2
 safety precautions2

S

safety,
 a few words about..... Safety Messages
 important information.....2
 important precautions2
 labels.....4
 maintenance.....23
 riding precautions16
 schedule, maintenance24
 seat33
 serial numbers.....150
 service,
 customer.....164
 manuals.....162
 spare parts159
 spark knock.....39
 spark plug,
 maintenance.....66
 reading135
 specifications151
 spring pre-load, rear suspension127
 starting,
 engine.....17
 troubleshooting147
 steering damper,
 adjustment.....136
 guidelines.....137
 operation inspection.....104

(cont’d)