

# Indicators

If one of these indicators does not come on when it should, have your dealer check for problems.

## **Rear ABS (Anti-lock Brake System) OFF indicator** CRF250RLA

Comes on briefly when the ignition switch is turned to the **I** (On) position.  
Comes on when the ABS function on the rear wheel is turned off.



**N Neutral indicator**  
Comes on when the transmission is in Neutral.

## **PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)**

Comes on briefly when the ignition switch is turned to the **I** (On) position with the engine stop switch in the **⊖** (Run) position.

**If it comes on while engine is running:**  **P.89**