

Engine Oil ► Changing Engine Oil & Filter

8. Install a new oil filter with the "OUT-SIDE" mark facing out.
9. Install the spring into the oil filter cover, and then install a new gasket and oil filter cover by tightening the oil filter cover bolts.

Torque: 7 lbf·ft (10 N·m, 1.0 kgf·m)

10. Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

Torque: 18 lbf·ft (24 N·m, 2.4 kgf·m)

11. Fill the crankcase with the recommended oil (► P. 48, ► P. 129) and install the oil fill cap.

Required oil

When changing oil & engine oil filter:

1.6 US qt (1.5 L)

When changing oil only:

1.5 US qt (1.4 L)

12. Check the oil level. ► P. 63
13. Check that there are no oil leaks.
14. Install the under cowl. ► P. 57

NOTICE

Improper installation of the oil filter can result in serious damage to the engine.

