

# Troubleshooting

<b>Engine Will Not Start</b> .....	P. 87
<b>Overheating (High coolant temperature indicator is on)</b> .....	P. 88
<b>Warning Indicators On or Flashing</b> .....	P. 89
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL) .....	P. 89
ABS (Anti-lock Brake System) Indicator .....	P. 89
<b>Other Warning Indications</b> .....	P. 90
Fuel Gauge Failure Indication .....	P. 90
<b>Tire Puncture</b> .....	P. 91
<b>Electrical Trouble</b> .....	P. 97
Battery Goes Dead .....	P. 97
Burned-out Light Bulb .....	P. 97
Blown Fuse .....	P. 101

<b>Unstable Engine Operation Occurs Intermittently</b> .....	P. 105
--	--------