



Under Cowl

Removal

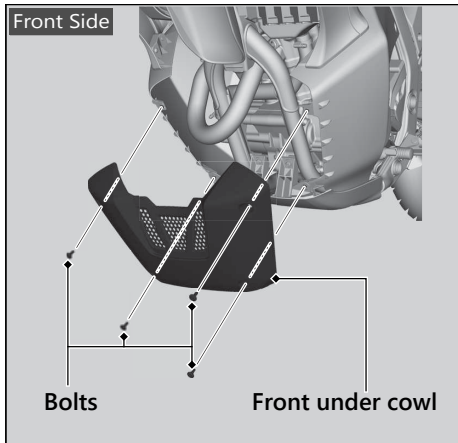

1. Remove the bolts and front under cowl.

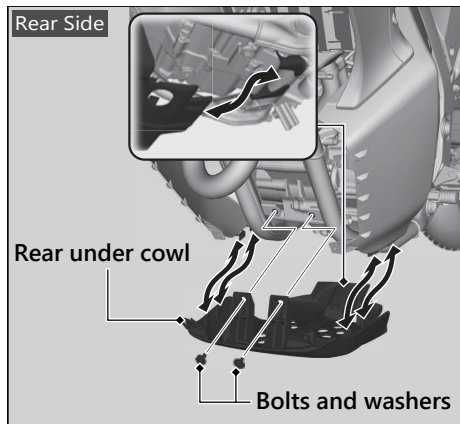

2. Remove the bolts and washers on rear under cowl.
3. Remove the rear under cowl.

Installation

Install the parts in the reverse order of removal.