

## Changing Air Cleaner Element

Use a new Honda Genuine air cleaner element or an equivalent specified for your motorcycle.

### NOTICE

Using the wrong air cleaner element may cause premature engine wear or performance problems.

1. Remove the right side cover. ➤ P. 56
2. Remove the air cleaner housing cover by removing the screws.
3. Release the tabs and pull out the air cleaner element.
4. Install the new air cleaner element.
  - ▶ Make sure the air cleaner element is installed securely.
5. Install the parts in the reverse order of removal.

