

ADJUSTMENTS FOR COMPETITION... 141	TIPS..... 163	INDEX 190
Engine Mode Select Button 142	Transporting Your Motorcycle 164	QUICK REFERENCE
Current Mode 142	Storing Your Honda 165	
Mode Selection..... 142	Preparation for Storage 165	
HRC-Launch Control System 143	Removal from Storage 165	
Front Suspension Adjustments 145	You & the Environment 166	
Front Suspension Air Pressure 145	Troubleshooting 167	
Front Suspension Damping 146		
Fork Springs 146	TAKING CARE OF THE UNEXPECTED... 169	
Fork Oil Adjustment..... 147	If a Fuse Blows 170	
Rear Suspension Adjustments 148	If Your Battery Is Low (or Dead) 171	
Rear Suspension Spring Pre-Load..... 148		
Rear Suspension Damping 149	TECHNICAL INFORMATION..... 173	
Rear Suspension Race Sag 150	Vehicle Identification 174	
Suspension Adjustments for Track	Serial Numbers 174	
Conditions 153	Specifications 175	
Suspension Adjustment Guidelines 154	Torque Specifications 176	
Tuning Tips 157	Nuts, Bolts, Fasteners 176	
Spark Plug Reading..... 157	Oxygenated Fuels 179	
Chassis Adjustments 158	Competition Logbook 180	
Rear End..... 158	Optional Parts List 182	
Fork Height/Angle..... 158	Spare Parts & Equipment 183	
Wheelbase 158	Spare Parts 183	
Gearing 159	General Tools..... 183	
Tire Selection for Track Conditions 160	Honda Special Tools..... 183	
Personal Fit Adjustments 161	Chemical Products 183	
Control Positioning 161	Other Products 183	
Handlebar Position, Width & Shape 161	Wiring Diagram 184	
	CONSUMER INFORMATION 185	
	Authorized Manuals 186	
	Contacting Honda 187	
	Your Honda Dealer 188	