



11. Install the washer (14), right muffler mounting B bolt (15) and A bolt (16).

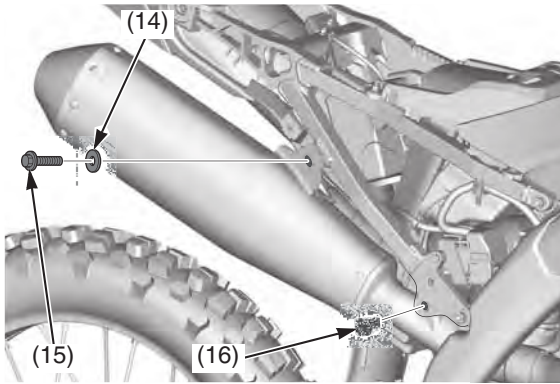


- (14) washer
 (15) right muffler mounting B bolt
 (16) right muffler mounting A bolt

12. Tighten the right muffler clamp bolt (17) and washer (18) to the specified torque:
 15 lbf·ft (20 N·m, 2.0 kgf·m)

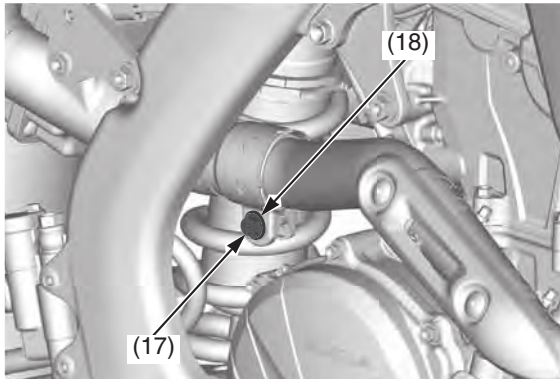


- (17) right muffler clamp bolt
 (18) washer

13. Tighten the right muffler mounting B bolt (15) and A bolt (16) to the specified torque:
 19 lbf·ft (26 N·m, 2.7 kgf·m)

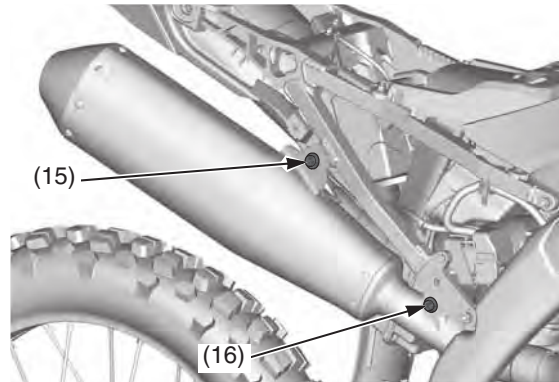

- (15) right muffler mounting B bolt
 (16) right muffler mounting A bolt


14. Tighten the left muffler mounting B bolt (8) and left muffler mounting A bolt (9) to the specified torque:
 19 lbf·ft (26 N·m, 2.7 kgf·m)

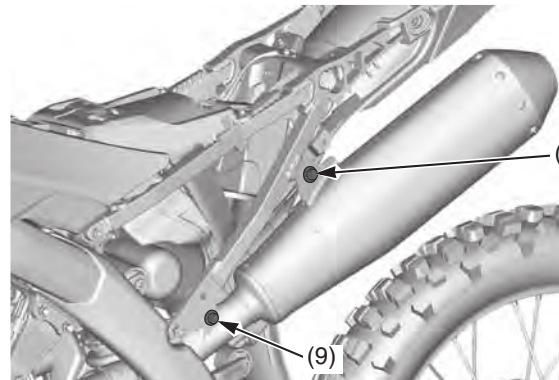

- (8) left muffler mounting B bolt
 (9) left muffler mounting A bolt

15. Install the air cleaner housing cover (19) and side cover (20) while air cleaner housing cover tab (21) insert to the seat support base slot (22), and then tighten the side cover/air cleaner housing cover bolts (23) to the specified torque:
 7 lbf·ft (10 N·m, 1.0 kgf·m)

The procedure is the same for the both right and left side

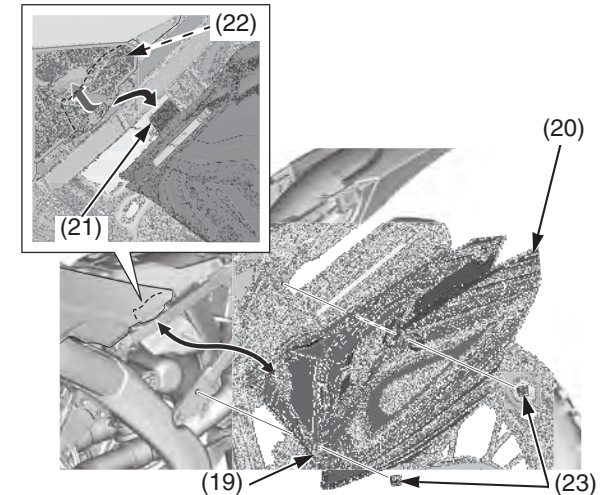

- (19) air cleaner housing cover
 (20) side cover
 (21) air cleaner housing cover tab
 (22) seat support base slot
 (23) bolts

16. Install the seat (page 33).