


Clutch System


Clutch Disc/Plate/Spring Inspection

- Replace the clutch discs (1) if they show signs of scoring or discoloration. Measure the thickness of each clutch disc. Service Limit: 0.112 in (2.85 mm) Replace the clutch discs and clutch plates as a set.

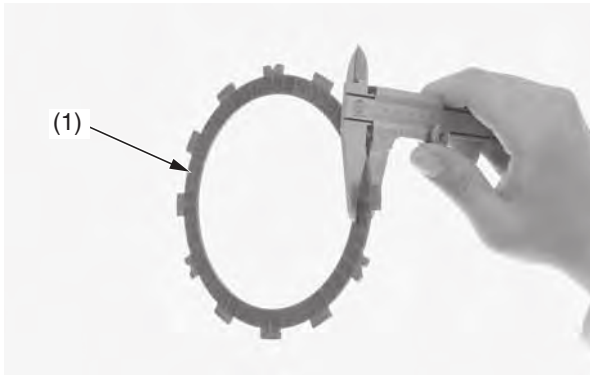


(1) clutch discs

- Check the clutch plates (2) for excessive warpage or discoloration. Check the plate warpage on a surface plate using a feeler gauge. Service Limit: 0.006 in (0.15 mm) Replace the clutch discs and plates as a set.

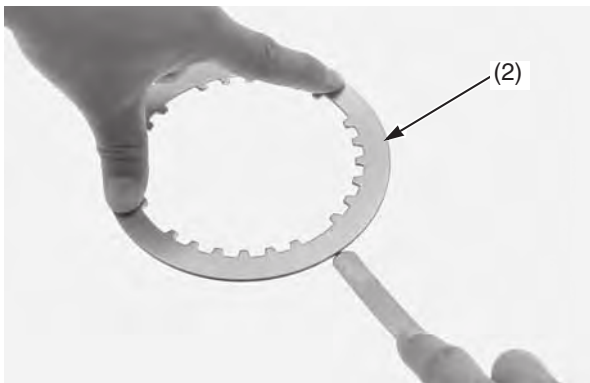

(2) clutch plates

- Check the clutch springs (3) for wear or damage. Measure the thickness of each clutch spring. Service Limit: 1.79 in (45.5 mm) Replace the clutch spring as a set.

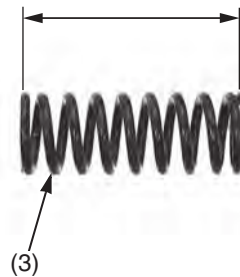


(3) clutch springs

- If you feel the clutch slippage when replacing the clutch discs and plates, replace the clutch springs.

Clutch Disc/Plate Installation

1. Install the spring seat (1) and judder spring (2) onto the clutch center as shown. Coat the clutch discs with engine oil.
2. Install the clutch disc A (larger I.D. disc) (3) onto the clutch outer. Stack the six clutch plates (4), five clutch discs B (5) alternately while aligning the lugs (6) of the clutch center with the groove (7) of the clutch plates as shown. Install the clutch disc C (8) by aligning its tabs (9) with the shallow slots (10) of the clutch outer.

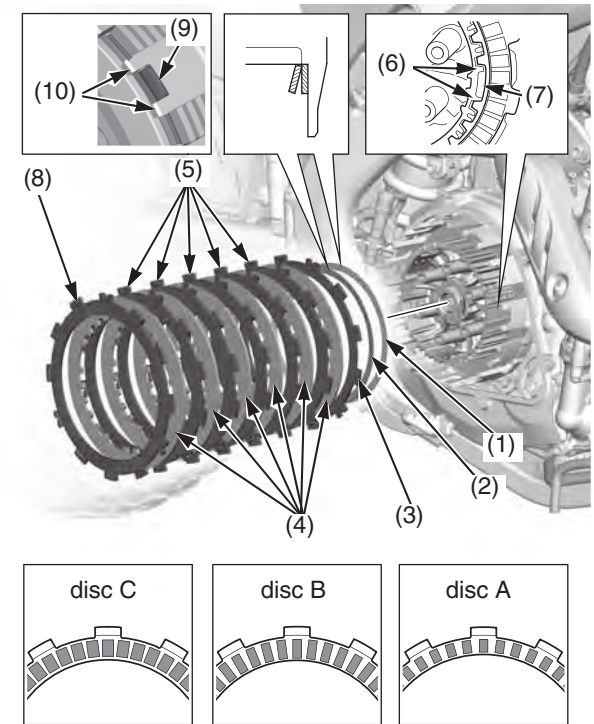

- | | |
|--------------------|--------------------|
| (1) spring seat | (6) lugs |
| (2) judder spring | (7) groove |
| (3) clutch disc A | (8) clutch disc C |
| (4) clutch plates | (9) tabs |
| (5) clutch discs B | (10) shallow slots |