


Piston/Piston Rings/Piston Pin

14. Install the ignition coil (28) and tighten the ignition coil bolts (29) to the specified torque: 7 lbf·ft (10 N·m, 1.0 kgf·m)
Connect the ignition coil A connector (30) and B connector (31).

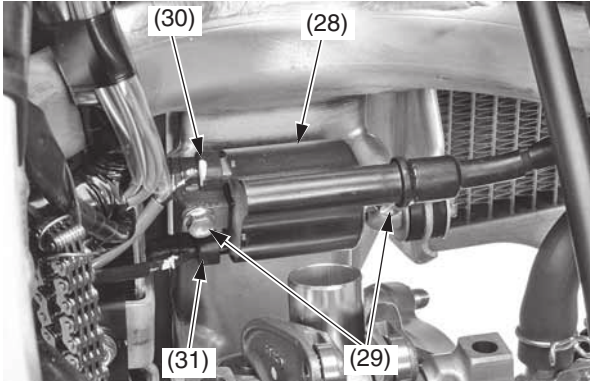

- (28) ignition coil
(29) ignition coil bolts
(30) ignition coil A connector
(31) ignition coil B connector

15. Install the shims, camshaft and camshaft holder (page 92).
16. Install the crankshaft hole cap (page 94).
17. Install the cylinder head cover (page 95).
18. Install the spark plug (page 86).
19. Install the exhaust pipe (page 134).
20. Install the subframe (page 55) and muffler (page 133).
21. Install the fuel tank and seat (pages 46, 50).
22. Fill and bleed the cooling system (page 159).
Check for the following:
- compression leaks
 - abnormal engine noise
 - secondary air leaks
 - exhaust gas leaks
 - coolant leaks
 - oil leaks