

This section discusses the more common problems that can occur with your motorcycle while you're riding. It tells you how to evaluate each problem and what actions you can take to try to resume riding. If the problem cannot be safely solved, this section also gives instructions on the proper way to have your motorcycle transported.

For information about transporting your motorcycle, see page 158.

General Guidelines .....	164
If Your Engine Quits or Won't Start.....	165
If You Have a Flat Tire.....	167
Should You Repair or Replace a Tire or Tube?.....	167
Emergency Front Wheel Removal/ Installation .....	167
Emergency Rear Wheel Removal/ Installation .....	169
If the High Coolant Temperature Indicator Lights .....	170
If You Have a Burned-out Light Bulb .....	171
Burned-out Light Bulb.....	171
If a Fuse Blows .....	172
If You Crash.....	173
If You Lose Your Key .....	174
If Your Battery Is Low (or Dead) .....	175