


Fuel Tank Removal

Refer to *Safety Precautions* on page 25.


Removal

1. Turn the fuel valve OFF.
2. Remove the seat (page 36).
3. Remove the shroud A bolts/collars (1).
4. Remove the shroud B bolts (2) and shroud (3).

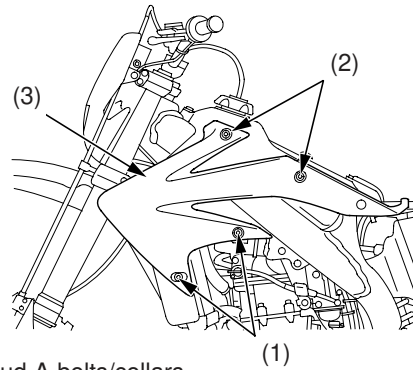

- (1) shroud A bolts/collars
(2) shroud B bolts
(3) shroud

5. Pull the breather tube (4) out of steering stem nut.
6. Unhook and remove the fuel tank band (5).
7. Unhook the air cleaner cover rubber (6).
8. Remove the fuel tank bolt/collar (7).

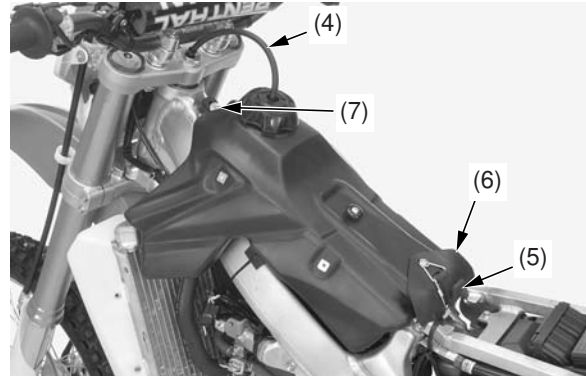


- (4) breather tube
(5) fuel tank band
(6) air cleaner cover rubber
(7) fuel tank bolt/collar

9. Disconnect the fuel line (8) from the fuel valve (9). The fuel line leading to the carburetor must be disconnected, not the fuel line leading to the fuel tank.
10. Remove the bolt (10) and fuel valve.
11. Remove the fuel tank.

⚠ WARNING

Petrol is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine and keep heat, sparks and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

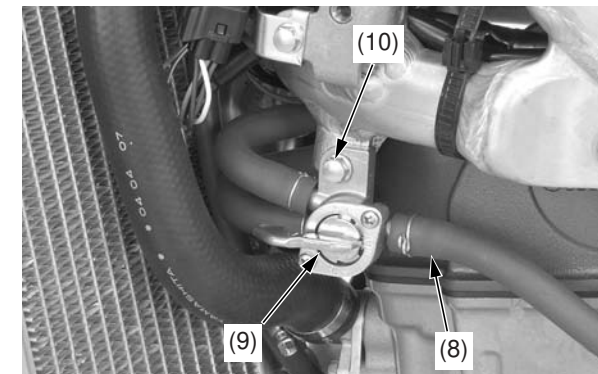

- (8) fuel line
(9) fuel valve

(10) bolt