

Exhaust Pipe/Muffler

Exhaust Pipe/Muffler Inspection


Check the mounting bolts and joint nuts for tightness.

Check the exhaust pipe and muffler for cracks or deformation.

A damaged exhaust pipe and muffler may reduce engine performance.


Muffler Removal

1. Remove the seat bolt (1), side cover bolt (2) and right side cover (3).

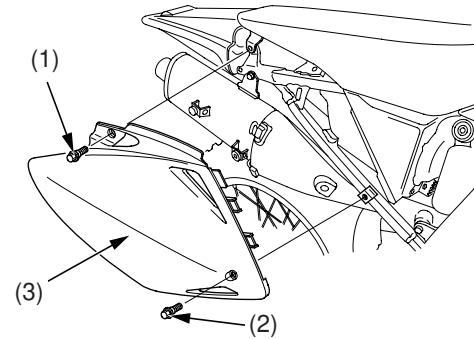

- (1) seat bolt
(2) side cover bolt
(3) right side cover

2. Loosen the muffler clamp bolt (4).
3. Remove the rear muffler mounting bolt/washer (5), front muffler mounting bolt (6) and muffler (7).

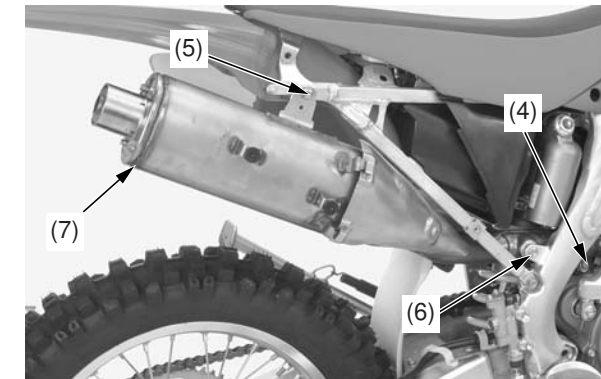

- (4) muffler clamp bolt
(5) rear muffler mounting bolt/washer
(6) front muffler mounting bolt
(7) muffler

4. Remove the muffler gasket.