


## Exhaust Pipe/Muffler

### Exhaust Pipe Removal


1. Remove the muffler (page 63).
2. Remove the exhaust pipe joint nuts (1), exhaust pipe (2) and exhaust pipe gasket (3).

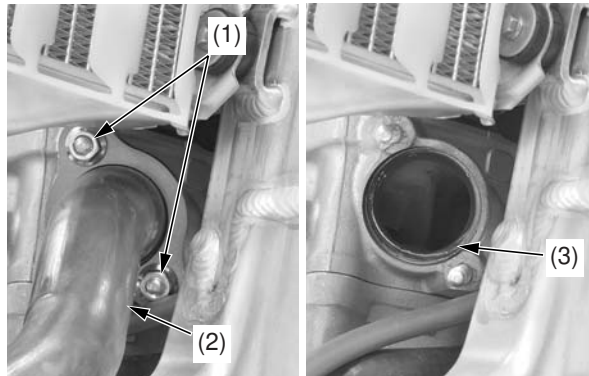

- (1) exhaust pipe joint nuts  
(2) exhaust pipe  
(3) exhaust pipe gasket

### Exhaust Pipe Installation

1. Install a new exhaust pipe gasket (1).
2. Install the exhaust pipe (2) and exhaust pipe joint nuts (3).
3. Tighten the nuts to the specified torque:  
21 N·m (2.1 kgf·m, 15 lbf·ft)

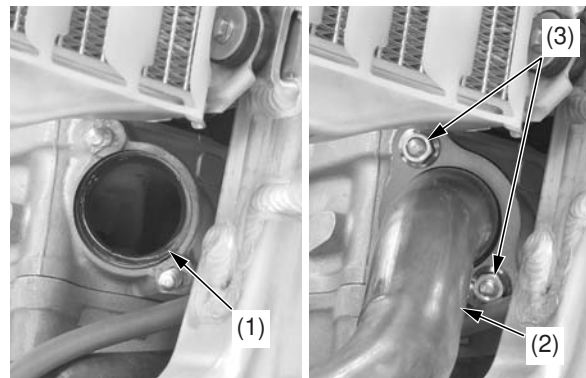

- (1) exhaust pipe gasket  
(2) exhaust pipe  
(3) exhaust pipe joint nuts

4. Install the muffler (page 64).