

## Clip

### Removal

1. Press down on the centre pin to release the lock.
2. Pull the clip out of the hole.



### Installation

1. Push the bottom of the centre pin.



2. Insert the clip into the hole.
3. Press down on the centre pin to lock the clip.

## Right Cowl

