

Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence. ➤ P. 23
- Check that there is petrol in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
 - ▶ If the indicator light is on, contact your dealer as soon as possible.

Starter Motor Does Not Operate

Check the following items:

- Check the correct engine starting sequence. ➤ P. 23
- Check for a blown fuse. ➤ P. 92
- Check for a loose battery connection or battery terminal corrosion. ➤ P. 48, ➤ P. 38
- Check the condition of the battery. ➤ P. 87

If the problem continues, have your motorcycle inspected by your dealer.