

**Speedometer****Odometer**

Shows accumulated mileage. If the mileage is under 1,000,000 km, the mileage will show in the display. If the mileage is over 1,000,000 km, the highest digit of the total mileage shows briefly before showing the remaining digits in the display.

**Gear position indicator**

Shows 1st to 6th gear position.  
 ▶ "-" appears when the transmission is not shifted properly.

**Fuel gauge**

Remaining fuel when only 1st (E) segment starts flashing:  
 approximately 1.31 L (0.346 US gal, 0.288 Imp gal)

**If the fuel gauge indicator flashes in a repeat pattern or turns off:** ➔ P.80