


6. Disconnect the spark plug cap from the spark plug.
7. Clean any dirt from around the spark plug base.
8. Remove the spark plug using provided spark plug wrench. ► P. 47

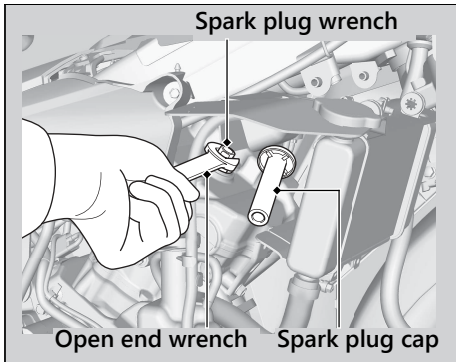

9. Inspect the electrodes and centre porcelain for deposits, erosion or carbon fouling.
 - If the erosion or deposit is heavy, replace the plug.
 - Clean a carbon or wet-fouled plug with a plug cleaner, otherwise use a wire brush.
10. Check the spark plug gap using a wire-type feeler gauge.
 - If adjustment is necessary, bend the side electrode carefully.

The gap should be:

0.8 - 0.9 mm (0.03 - 0.04 in)