

# Troubleshooting

<b>Engine Will Not Start</b> .....	P. 77
<b>Overheating (High coolant temperature indicator is on)</b> .....	P. 78
<b>Warning Indicators On or Flashing</b> .....	P. 79
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL) .....	P. 79
<b>Other Warning Indications</b> .....	P. 80
Fuel Gauge Failure Indication .....	P. 80
<b>Tyre Puncture</b> .....	P. 81
<b>Electrical Trouble</b> .....	P. 87
Battery Goes Dead .....	P. 87
Burned-out Light Bulb.....	P. 87
Blown Fuse .....	P. 92

<b>Unstable Engine Operation Occurs Intermittently</b> .....	P. 93
--	-------