

## Instruments, Controls, & Other Features

### Ignition Switch

Leaving the ignition switch in the **I** (On) position with the engine stopped will drain the battery. Do not turn the key while riding.

### Odometer

The display locks at 999,999.9 when the read-out exceeds 999,999.9.

### Document Bag

The owner's manual, registration, and insurance information can be stored in the plastic document bag located under the seat.

### Ignition Cut-off System

A banking (lean angle) sensor automatically stops the engine and fuel pump if the vehicle falls over. To reset the sensor, you must turn the ignition switch to the **O** (Off) position and back to the **I** (On) position before the engine can be restarted.

### High Beam Indicator

The high beam indicator will come on briefly due to the capacitor being discharged when the ignition switch is turned to the **I** (On) position immediately after the engine is stopped with the high beam.

### Headlight

The headlight will come on briefly due to the capacitor being discharged when the headlight dimmer switch is operated immediately after the engine is stopped with the high beam.