

Gauges & Indicators

Lamp Check

Most of the indicator lights come on when you turn the ignition switch ON so you can check that they are working. Some indicators turn off after a few seconds; others remain on until or after the engine is started.

(Models equipped with ABS)

The ABS indicator goes off after you ride the motorcycle at a speed above 6 mph (10 km/h).

All indicators are identified on the following pages with the words: *Lamp Check*.

When applicable, the high beam and neutral indicators come on when you turn the ignition switch ON and remain on until you select the low beam or shift out of neutral.

If one of these indicators does not come on when it should, have your dealer check for problems.



speedometer

Shows riding speed in miles (USA) or kilometers (Canada) per hour.



tachometer

Shows engine speed in revolutions per minute (rpm).



tachometer red zone

Shows excessive engine rpm range (indicated from the beginning of the tachometer red zone) in which operation may damage the engine. Do not let the tachometer needle enter the red zone.