

# Gauges & Indicators

---



low fuel indicator (amber)

Lights as a reminder to refuel soon. The indicator comes on when there is about 1.16 US gal (4.4 liters) left in the fuel tank. *Lamp Check*.

---



fuel gauge

Shows the approximate fuel supply available, if your motorcycle is on a level surface.

At F (Full) there are 6.6 US gal (25 liters), including reserve supply. When the gauge needle enters the red band, fuel will be low and you should refill the tank as soon as possible. The amount of fuel left in the tank when the needle enters the red band is approximately 0.79 US gal (3.0 liters).

---



coolant temperature gauge

Shows engine coolant temperature. When the needle moves above the C (cold) mark, the engine is warm enough to start riding. If the needle approaches the H (hot) mark, pull safely to the side of the road. See [page 207](#) for instructions and cautions.