
 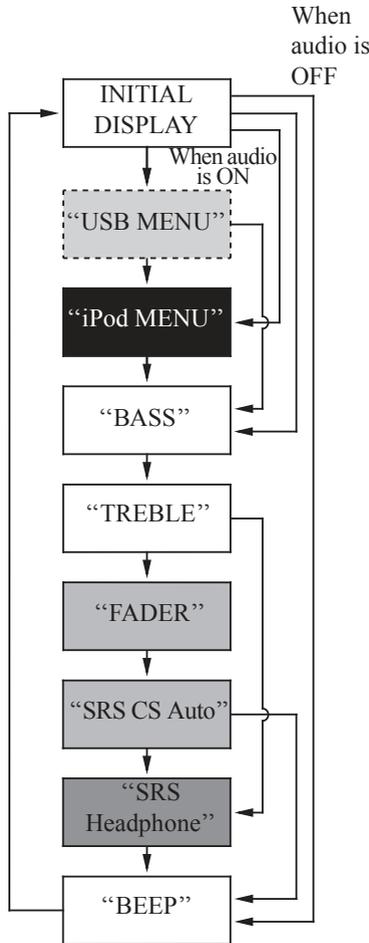
 


## MODE Knob/Button Function

 


• —————> Push the MODE Knob/Button

•  When the speaker is used

•  When the headset is used

•  When USB flash drive is used

•  When iPod® is used